EDITION A B C D E F

Assembly Manual for the

DICK SMITH ELECTRONICS INDUCTION BALANCE METAL DETECTOR KIT (SHORT FORM)

Cat. K-3100

REPRINTED BY COURTESY OF ELECTRONICS TODAY INTERNATIONAL

Note that this kit includes only the electronics, the control box and wire and cable. The housing and handle for the search head are not included.

another superb easy to build DICK SMITH KIT

Before beginning this project, note that the successful operation of the unit depends ENTIRELY on the construction of the search head and coils. The electronics is quite straightforward but careless construction of the coil will prevent the unit from operating. Great care, neatness and patience are necessary to construct the coil correctly. A sensitive oscilloscope is useful when setting the unit up (though not essential).

The unit works on the Induction Balance principle, a much more effective system than the usual beat frequency oscillator type.

The IB principle uses two coils arranged in such a way that there is virtually no inductive pickup between them. A modulated signal is fed into one. When metal is brought near, the electromagnetic field is disturbed and the other coil picks up an appreciably higher signal.

Ideally the instrument is initially set up for no pick up in the 'receiver' coil, but this is impossible in practice – the coils are, after all laid on top of each other. The circuit is arranged so that the signal is gated and is set up so that only the minutest part of the signal is heard when no metal is present. When the coils are brought near metal, a minute change in level becomes an enormous change in volume.

This detector is extremely sensitive – in fact a bit too sensitive for some applications! For this reason we have included a high-low sensitivity switch. You may ask why low sensitivity is useful. As a crude example, take a coin lying on a wooden floor: on maximum sensitivity the detector will pick up the nails etc., and give the same readings as for the coin, making it difficult to find.

Treasure hunting is an art and the dual sensitivity may only be appreciated after trials.

Output is connected for an 8 ohm speaker and to headphones. Stereo types are the most common and the wiring of the jack socket is such that the two sections are connected in series presenting a 16 ohm load (this reduces current consumption).

CONSTRUCTION

The majority of the components are mounted on the printed circuit board. Follow the board overlay carefully making sure that all polarised components (transistors, diodes and electrolytic capacitors) are correctly oriented.

Extreme care should be taken to mount all components firmly to the board. Poor connections or dubious solder joints may be acceptable in some circuits – not in this one.

The box will have to be drilled to mount the speaker, the pots, switches, headphone jack and the cable from the search head.

The handle assembly

The handle we used was simply a broom handle with the end cut off at about 45°. After assembling the head, the handle can be glued on with epoxy. A small woodscrew can be used to hold it in place until dry. This should be done before final setting up of the coils – in case the screw cannot be removed after the glue has set.

The coil

Remember this is the key to the whole operation. The casing of the coil is not so critical but the layout is.

It is best first to make the 6mm plywood ring to the dimensions shown in fig. 6. A disc of thinner plywood or hardboard is then firmly glued onto this – it's fairly easy to cut this after glueing. Use good quality ply and a modern wood glue to make this.

This now forms a dish into which the coils are fitted.

You'll now have to find something cylindrical with a diameter of near enough to 140mm. A coil will then have to be made of 40 turns of 32swg enamelled copper wire. The wire should be wound close together and kept well bunched and taped to keep it together when removed from the former. Two such coils are required. These are identical.

One of the coils is then fitted into the dish and spot glued in six or eight places using quick setting epoxy resin.

The second coil (L2) is then fitted into place, again spot glueing (*not* in the area that it overlaps L1). The cable connecting the coils to the circuit is then fed through a hole drilled in the dish and connected to the four ends. Make sure that all the enamel insulation is removed from the coil ends (using sandpaper etc.) before soldering. These should be directly wired and glued in place, obviously taking care that they don't short. The cable is a four wire type with individual screens – the screens are left unconnected at the search head.

SETTING UP

You will need the built up control box and preferably a 'scope. The transmit circuit is connected to L1. The signal induced into L2 is monitored; at first this may be very high but by manipulating L2 the level will be seen to fall to a very low level. When a very low level is reached, spot glue L2 until only a small part is left for bending.

Ensure when you are doing this that you are as far away from any metal as possible (remove watches etc.) but that any metal used to mount the handle to the head is in place. Small amounts of metal are acceptable as long as they are taken into account whilst setting up.

Now connect the remainder of the circuit and set RV1 so that is is *just* passing through a signal to the speaker. Bring a piece of metal near the coil and the signal should rise. If it falls in level (i.e. the crackling disappears) the coil has to be

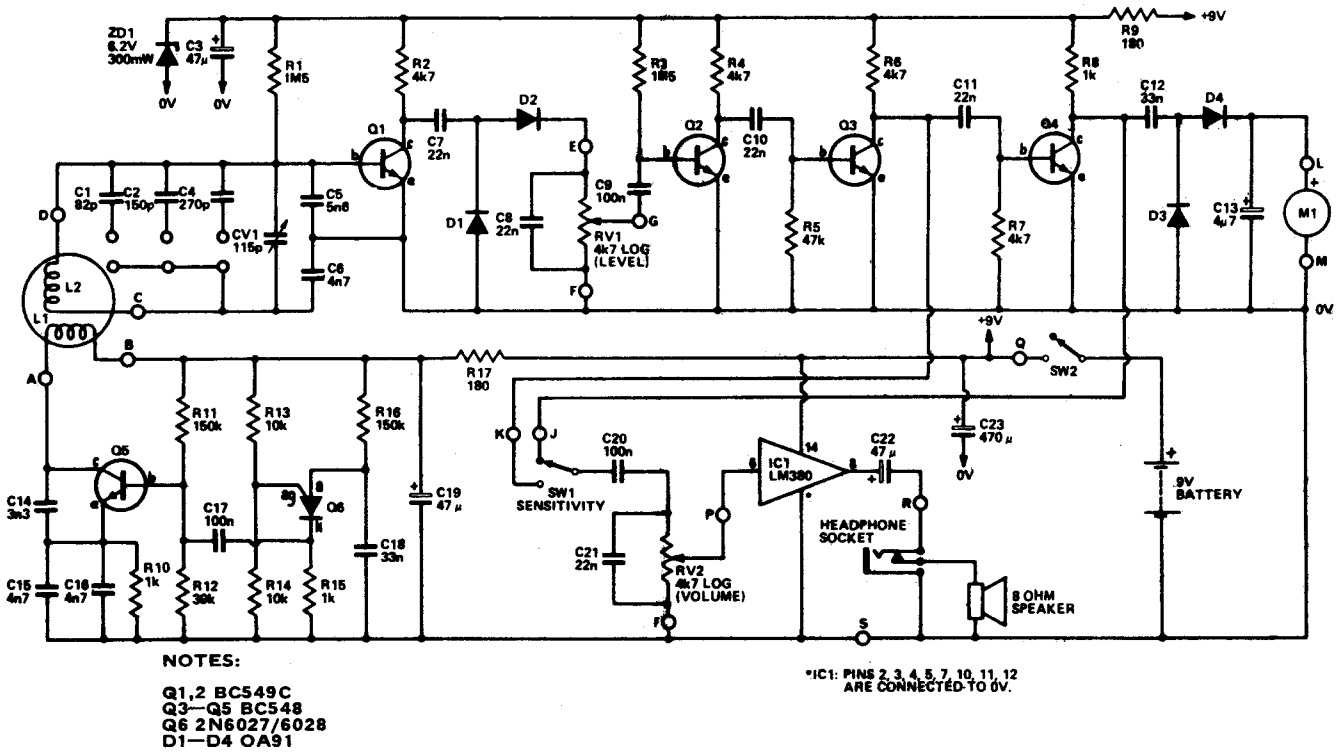

Fig. 1. Complete circuit of the metal detector. Note that though the electronics is simple, using very common parts, the whole operation depends on the coil L1 and L2 which must be arranged so that there is minimal inductive coupling between the two. Note also that the leads from the circuit board to the search head must be individually screened and earthed at PCB.

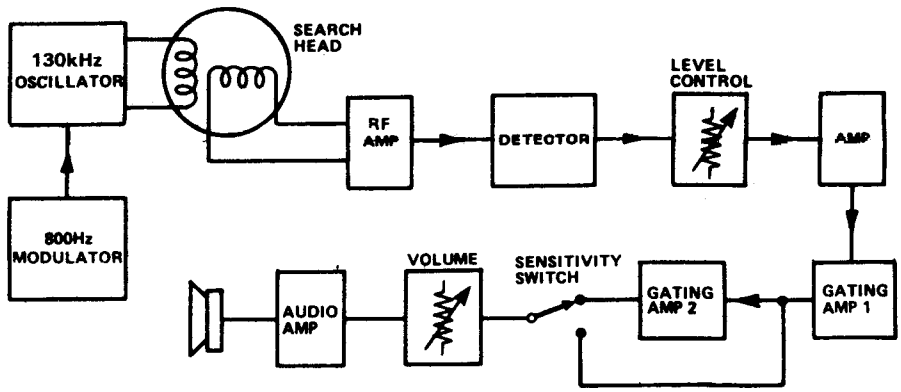

Fig. 2 Block diagram of our IB design.

adjusted until metal brings about a rise with no initial fall. CV1 should be adjusted for maximum signal, this has to be done in conjunction with RV1. The additional capacitors C1, C2 and C4 should be linked in if the range is not available on CV1.

Monitoring this on a scope may mean that the induced signal is not at its absolute minimum: this doesn't matter too much. Now add more spot glueing points to L2.

You should now try the metal detector in operation. If RV1 is being operated entirely at the lower end of its track, making setting difficult, you can select a lower gain transistor such as a DS548 for Q2.

When you are quite certain that no more manipulation of the coils will improve the performance, mix up plenty of epoxy resin and smother both coils, making certain that you don't move them relative to each other.

The base plate can then be fitted to enclose the coils, this should be glued in place.

If after glueing in place the balance between the coils is found to be not quite right it should be possible to glue a small piece of metal (such as a washer) somewhere on the head to cancel the error.

USING THE METAL DETECTOR

You will find that finding buried metal is rather *too* easy. 95% will be junk - foil being a curse. The search head should be moved slowly over the surface taking care to overlap each sweep the sensitive area is somewhat less than the diameter of the coil.

This type of detector will also pick up some materials which are not metal – especially coke. And it is not at its best in wet grass.

Think very carefully about where you want to search: this is more important than actually looking. The area you can cover thoroughly is very, very small, but this approach is far more successful than nipping all over the place. As an example of how much better a thorough search is, we thoroughly tried on 2¼ square metres of common ground (1.5m square); we found over 120 items. A quick initial search had revealed only two!

Treasure hunting is growing in popularity and those who do it seriously have adopted a code; essentially this asks you to respect other people's property, to fill in the holes you dig and to report any interesting finds to museums.

Meter circuit

Since the circuit is basically sensing a change in audio level, a meter circuit is incorporated. For the first indication from the 'crackle' your ears are likely to be more sensitive than the meter but thereafter it will come into its own.

PARTS LIST – ETI 549

Resistors all ½ W 5%

R1	1M5
R2	4k7
R3	1M5
R4	4k7
R5	47 k
R6,7	4k7
R8	1 k
R9	180 ohms
R10	1 k
R11	150 k
R12	39 k
R13,14	10 k
R15	1 k
R16	150 k
R17	180 ohms

Potentiometers

RV1,2	rotary 4k7 log

Capacitors

C1	82 p ceramic
C2	150 p ceramic
C3	47 µ 10 V electro
C4	270 p ceramic
C5	5n6 ceramic
C6	4n7 ceramic
C7,8	22 n polyester
C9	100 n polyester
C10,11	22 n polyester
C12	33 n polyester
C13	4µ7 25 V electro
C14	3n3 ceramic
C15,16	4n7 ceramic
C17	100 n polyestar
C18	33 n polyester
C19	47 µ 10 V electro
C20	100 n polyester
C21	22 n polyester
C22	47 µ 10 V electro
C23	470 µ 16 V electro

CV1	115 p variable

Semiconductors

Q1,2	Transistors DS549
Q3-Q5	Transistors DS548
Q6	PUT 2N6027/6028
D1-D4	Diodes OA91, OA95
IC1	Amplifier LM 380
ZD1	Zener 6.2 V 300 mW

Miscellaneous

PC board	ETI 549 A
Meter	
*4 strand cable x 2M or	
2 strand cable x 4M	
Two changeover slide switches.	
Two knobs	
Suitable case (158 x 95 x 50 mm)	
Phone socket	
Small speaker	
9 V battery clip	
Six by AA battery holder	
*See Text	

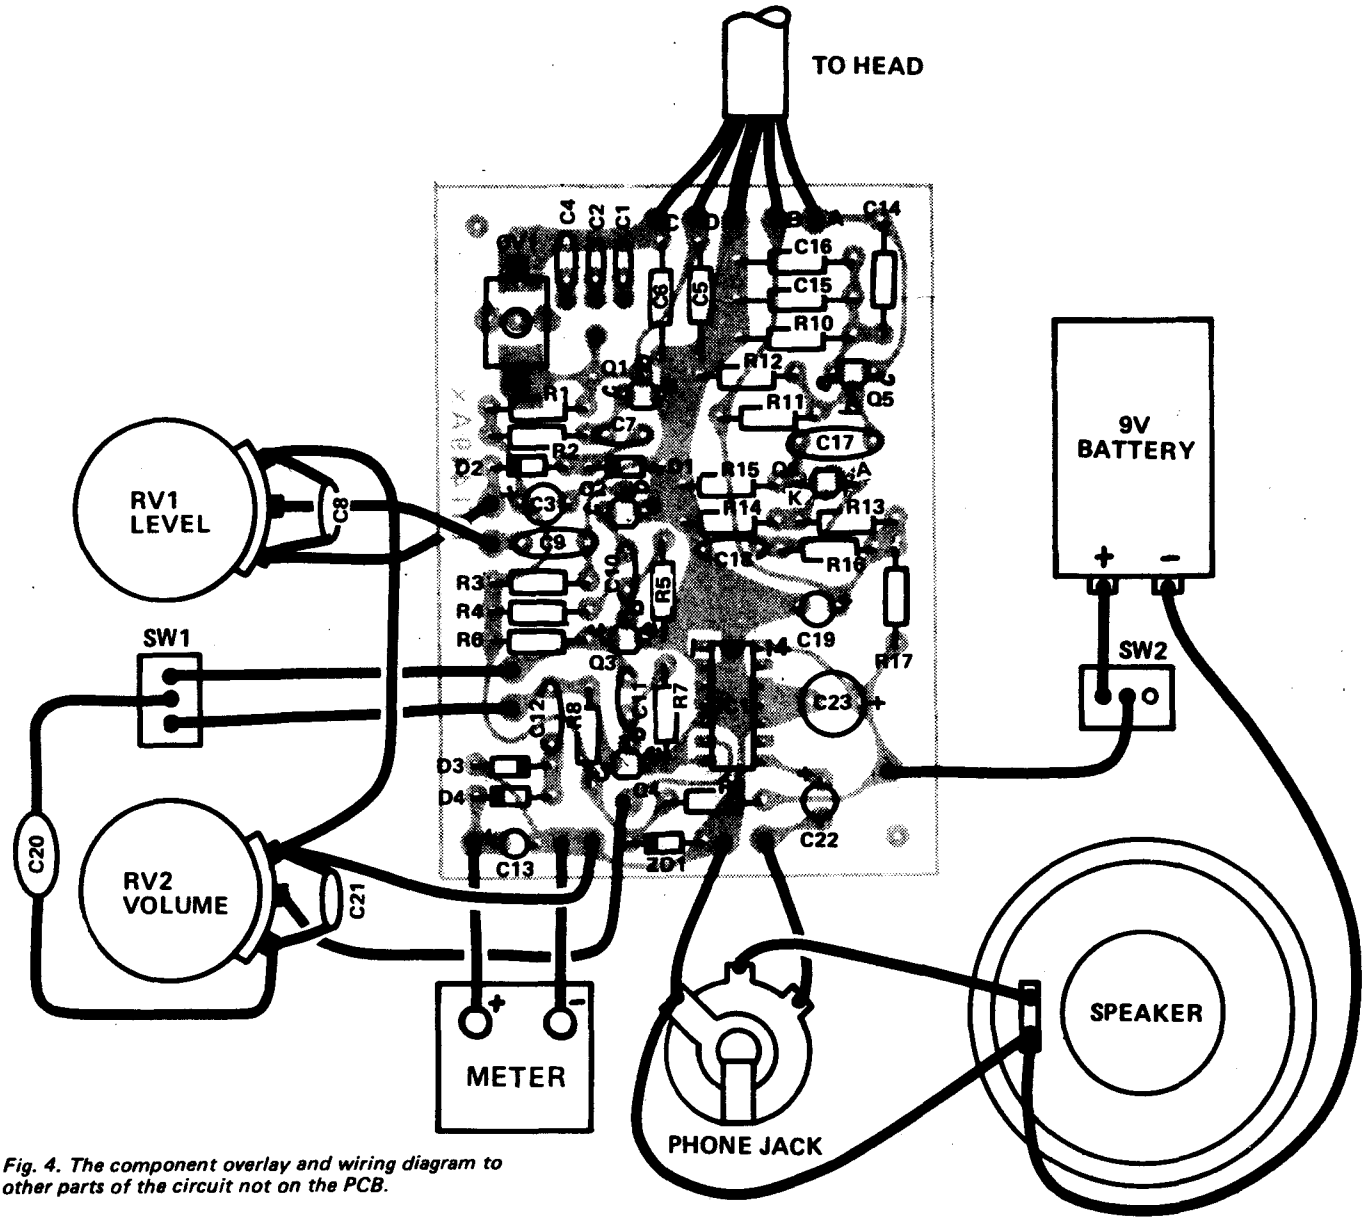

Fig. 4. The component overlay and wiring diagram to other parts of the circuit not on the PCB.

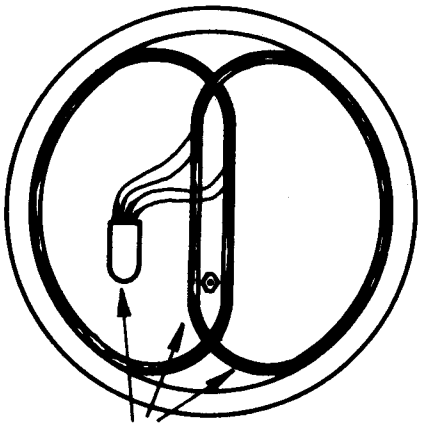

COILS AND POWER CORD ARE GLUED INTO POSITION WITH FIVE MINUTE EPOXY.

Fig. 5. Diagram showing the position of the coils in the search head.

Fig. 6. Construction of the search head and handle.

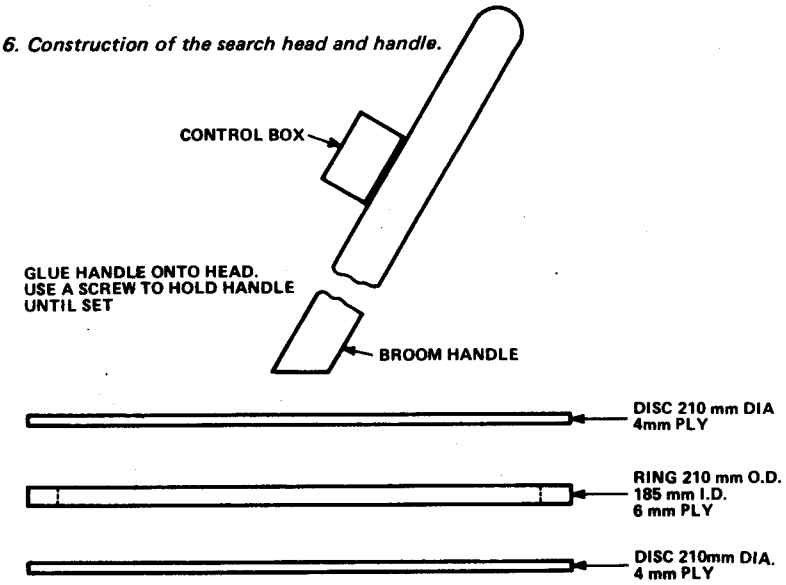
CONTROL BOX
GLUE HANDLE ONTO HEAD. USE A SCREW TO HOLD HANDLE UNTIL SET
BROOM HANDLE
DISC 210 mm DIA 4mm PLY
RING 210 mm O.D. 185 mm I.D. 6 mm PLY
DISC 210mm DIA. 4 mm PLY

How It Works – ETI 549

Q5, Q6 and associated components form the transmitter section of the circuit. Q6 is a P.U.T. which operates as a relaxation oscillator, the audio note produced being determined by R16 and C18. The specified components give a tone of roughly 800 Hz.

Q5 is connected as Colpitt's oscillator working at a nominal 130 kHz; this signal is heavily modulated by C17 feeding to the base of Q5. In fact the oscillator produces bursts of r.f. at 800 Hz. L1 in the search head is the transmitter coil.

L2 is arranged in the search head in such a way that the minimum possible signal from L1 is induced into it (but see notes on setting up). On all the prototypes we made we reduced this to about 20 mV peak-to-peak in L2. L2 is tuned by C5 and C6 and peaked by CV1 and feeds to the base of Q1, a high gain amplifier. This signal (which is still modulated r.f.) is detected by D1, and D2. The r.f. is eliminated by C8 and connects to the level control RV1.

The signal is amplified by Q2 and then further amplified by Q3 which has no d.c. bias connected to the base. In no-signal conditions this will be turned off totally and will only conduct when the peaks of the 800 Hz exceed about 0.6V across R5. Only the signal above this level is amplified.

On low sensitivity these peaks are connected to the volume control RV2 (any stray r.f. or very sharp peaks being smoothed by C21) and fed to the IC amplifier and so to the speaker.

The high sensitivity stage Q4 is connected at all times and introduces another gating stage serving the same purpose as the earlier stage of Q3. This emphasises the change in level in L2 even more dramatically. Note that RV1 has to be set differently for high and low sensitivity settings of SW1.

Whichever setting is chosen for SW1. RV1 is set so that a signal can just be heard. In practice it will be found that between no-signal and moderate-signal there is a setting for RV1 where a 'crackle' can be heard. Odd peaks of the 800 Hz find their way through but they do not come through as a tone. This is the correct setting for RV1.

The stage Q4 also feeds the meter circuit. Due to the nature of the pulses this need only be very simple.

Since we are detecting really minute changes in level it is important that the supply voltage in the early stages of the receiver are stabilised, for this reason ZD1 is included to hold the supply steady independent of battery voltage (which will fall on high output due to the current drawn by IC1).

It is also important that the supply voltage to Q5 and Q6 does not feed any singal through to the receiver. If trouble is experienced (we didn't get any) a separate 9V battery could be used to supply this stage.

IC1 is being well underused so a heatsink is unnecessary.

Battery consumption is fairly high on signal conditions – between 60 mA and 80 mA on various prototypes but this will only be for very short periods and is thus acceptable. A more modest 20 mA or so is normal at the 'crackling' setting.

Stereo headphones are used and are connected in series to present 16 ohms to IC1 reducing current consumption.

DICK SMITH Electronics

SHOPS OPEN 9AM to 5.30PM (Saturday: 9am till 12 noon) BRISBANE: Half hour earlier. ANY TERMS OFFERED ARE TO APPROVED APPLICANTS ONLY

welcome here

NSW	145 Parramatta Rd	AUBURN	648	0558
	T55 Terrace Level	BANKSTOWN SQ.	707	4888
	613 Princes Hwy	BLAKEHURST	546	7744
	552 Oxford St	BONDI JUNCTION	387	1444
	818 George St	BROADWAY	211	3777
	531 Pittwater Rd	BROOKVALE	93	0441
	147 Hume Hwy	CHULLORA	642	8922
	162 Pacific Hwy	GORE HILL	439	5311
	396 Lane Cove Rd	NORTH RYDE	888	3200
	30 Grose St	PARRAMATTA	683	1133
	125 York St	SYDNEY	290	3377
	173 Maitland Rd	NEWCASTLE	61	1896
	263 Keira St	WOLLONGONG	28	3800
VIC	399 Lonsdale St	MELBOURNE	67	9834
	260 Sydney Rd	COBURG	383	4455
	656 Bridge Rd	RICHMOND	428	1614
	Dandenong Rd	SPRINGVALE	547	0522
	205 Melbourne Rd	GEELONG	78	6363
	Cnr Ross Smith Ave and Nepean Hwy	FRANKSTON	783	9144
ACT	96 Gladstone St	FYSHWICK	80	4944
QLD	166 Logan Rd	BURANDA	391	6233
	842 Gympie Rd	CHERMSIDE	59	6255
SA	60 Wright St	ADELAIDE	212	1962
	435 Main North Rd	ENFIELD	260	6088
	Cnr Main South Rd and Flagstaff Rd	DARLINGTON	298	8977
WA	Cnr Wharf St and Albany Hwy	CANNINGTON	451	8666
	414 William St	PERTH	328	6944

Mail Order Centre: PO Box 321, North Ryde 2113
Phone: (02) 888 3200